Russell Hobbs®

INSTRUCTIONS AND WARRANTY

RUSSELL HOBBS DESIRE JUG BLENDER AND/ OR FOOD PROCESSOR COMBO
MODEL NO: 18990/ 18991/ 19000-56

Thank you for purchasing the Russell Hobbs Desire Jug Blender and/ or Food Processor Combo. Each unit has been manufactured to ensure safety, reliability and ease of use. Before use, please read these instructions carefully and keep them for further reference.

Features of the Russell Hobbs Desire Jug Blender

- 750W at maximum load
- Choice of two speeds and pulse setting
- 1.5 litre plastic jug (18990-56) OR glass jug (18991-56) with safety lock on base
- Non-slip feet for added stability
- Stylish matt black finish with red accents

Features of the Russel Hobbs Desire Food Processor Combo

(Model: 19000-56)

- 750W at maximum load
- Choice of two speeds and pulse setting
- 1.5 litre capacity plastic blending jug
- Accessories include: slicing disc, shredding disc and dough tool
- 1.5 litre food processing bowl with safety lock lid
- Non-slip feet for added stability
- Stylish matt black finish with red accents

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Do not put the motor unit in water or any other liquid; do not use it in a bathroom or near any source of water and do not use outdoors.
2. The appliance must be used only by a responsible adult.
3. Unplug the appliance before disassembly or cleaning.
4. The appliance is fitted with a safety switch to prevent the motor operating unless the jug is in place. Do not use this as a method to switch the appliance on and off.
5. Turn the switch to standby OFF (0) before fitting the jug to the motor unit.

6. Turn the switch to standby OFF (0) and wait until the blades come to a complete stop before removing the lid from the jug, and before removing the jug from the motor unit.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Do not use the blender without first locking the lid in place.
10. Do not fill the jug with boiling liquids. Don't fill the jug with anything hotter than what you can comfortably handle (i.e. liquid temperature below 40°C).
11. Do not put your hand into the jug, even when it has been removed for cleaning – the blades are very sharp.
12. Do not put any other object (spoon, spatula, etc.) into the jug while the blender is plugged in.
13. Do not leave the blender unattended when plugged in.
14. Position the motor unit on a dry, firm, level surface, close to a power socket and out of reach of children.
15. Route the mains lead so that it cannot be caught accidentally or tripped over.
16. Keep the blender and the mains lead away from hotplates, hobs and burners.
17. Store the blender away from direct sunlight and fluorescent light where possible.
18. Do not let the jug overflow. If liquid gets under the motor unit, it may be sucked into the motor, damaging it.
19. Do not fill the jug above the 1500 ml mark. If you do, the contents may force the lid off when you start the motor.
21. Do not use the blender for any purpose other than those described in these instructions.
22. Do not run the blender empty, as it may overheat.
23. Do not operate the blender after it malfunctions. If the mains lead or plug is damaged, return the blender to the manufacturer in order to avoid a hazard.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.

Parts Diagram

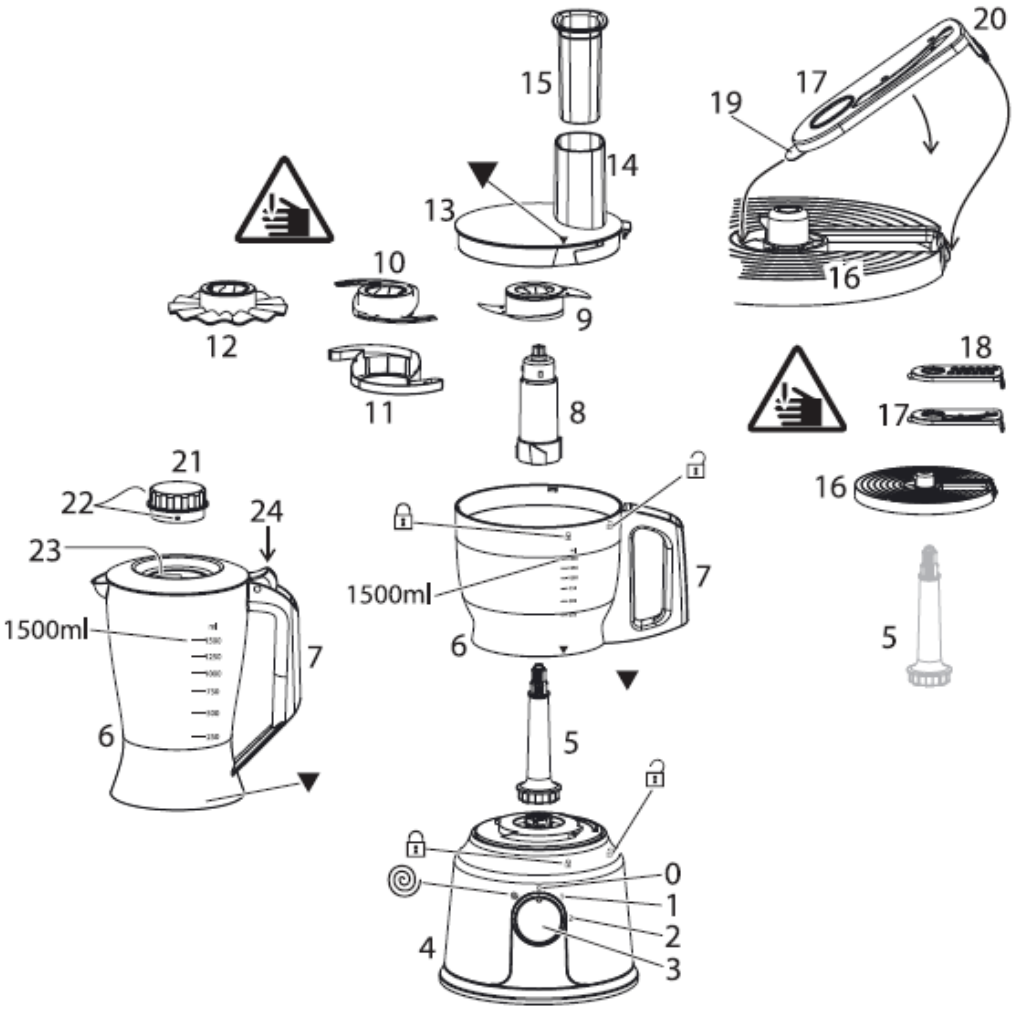

diagrams		
0 off	7 handle	16 disc
1 low	8 support	17 slicer
2 high	9 mixer	18 grater
3 speed control	10 chopper	19 tab
4 motor unit	11 blade guard	20 latch
pulse	12 creamer	21 cap
5 spindle	13 lid	22 hole
6 jug	14 tube	23 pips
	15 pusher	24 press

Before Use

Before using your appliance for the first time, wash the jug, lid and cap in warm soapy water, rinse well and dry. NOTE: The blades are sharp, handle with care.

Preparation

1. Position the motor unit on a dry, firm, level surface, close to a power socket and out of reach of children.
2. Check that the control knob is set to OFF (0).

Using the Blender

1. Align the arrow on the bottom of the jug with the UNLOCK symbol on the motor unit.
2. Lower the jug on to the motor unit, then turn the jug to align the arrow with the LOCK symbol.
3. Press the lever to open the lid.
4. Put the ingredients into the jug.
5. Don’t fill past the 1500ml mark. If you do, the contents may force the lid off when you start the motor.
6. Fit the lid to the jug.
7. Align the pips on the cap with the slots in the hole, fit the cap, and turn it clockwise to lock it.
8. To add ingredients while the blender is in operation, remove the cap, pour the new ingredients through the hole, then replace the cap.
9. Check that the added ingredients don’t push the volume in the jug past the 1500ml mark.

Adding ingredients

If you need to add ingredients while the blender is working, lift the cap off, pour the new ingredients through the hole, then replace the cap. Make sure that the added ingredients do not push the volume in the jug past the 1500ml mark.

Fitting the Lid

1. Always fit the lid to the jug before using it.
2. Press well on the lid until the flanges are fitted well in the jug.
3. Put the cap into the hole in the lid and press it down to fit properly.
4. It is not a good idea to run the blender without the cap, especially if only solid ingredients are used. They may be ejected through the hole when they hit the blades.

The Switch

1. Turn the speed control to the speed you want (1 = low, 2 = high).
2. Turn the speed control back to 0 or OFF to turn the motor off.
3. Generally, large quantities, thick mixes and a high ratio of solids to liquids suggest longer timings and slower speeds. Smaller quantities, thinner mixes and more liquids than solids suggest shorter timings and higher speeds.
4. Don't run the motor for more than 1 minute, or it may overheat. After 1 minute, switch off for at least 2 minutes, to let the motor cool.

Pulse Function

Turning the speed control anti-clockwise to PULSE will give you a short burst at maximum speed, regardless of the current speed of the blades. The button is spring-loaded. When you let go, it will return to OFF (0).

Finished

Turn the switch to OFF (0), wait until the blades have stopped moving before removing the lid from the jug – or removing the jug from the motor unit. Hold the motor unit with one hand, grasp the handle with the other hand, and then lift it off the motor unit. Lift the lid off the jug.

Using the Food Processor

This section applies specifically to model 19000-56 Food Processor Combo.

1. Switch the appliance OFF (0) and unplug it.
2. Fit the spindle to the top of the motor unit.
3. Align the arrow on the bottom of the jug with the UNLOCK symbol on the motor unit.
4. Lower the jug on to the motor unit, then turn the jug to align the arrow with the LOCK

symbol.

5. Turn the lid to bring the arrow on the lid over the UNLOCK on the jug, and lift the lid off.
6. Choose the attachment you need.

With the Support

1. Use the chopper for pulverizing ingredients.
2. Use the mixer to mix ingredients together.
3. Use the creamer to thicken cream, to beat eggs, and to cream eggs and sugar together.
4. Fit the attachment over the support and slide it to the bottom.
5. Lower the support into the centre of the jug, over the spindle.
6. Put the ingredients into the jug.
7. Don't fill past the 1500ml mark. If you do, the contents may force the lid off when you start the motor.
8. Replace the lid and turn it to bring the arrow on the lid over the LOCK symbol on the jug, to lock it in place.
9. To add ingredients while the motor is running:
   a) lift the pusher out of the tube
   b) add the ingredients via the tube
   c) replace the pusher

To fit the Slicer or Grater to the Disc:

1. Insert the tab into the centre of the disc.
2. Lower the slicer/grater into the disc.
3. Secure the latch over the edge of the disc.
4. Lower the disc over the top of the spindle.
5. Replace the lid, and turn it to bring the arrow on the lid over the LOCK symbol on the jug, to lock it in place.
6. Remove the pusher and drop the ingredients down the tube.
7. Replace the pusher, and use it to push the ingredients gently down the tube. Don't use fingers or cutlery to push food down the tube – only the pusher.
8. The blade(s) on top of the disc will slice or grate the food into the processor bowl.
9. Don't let the processor bowl get more than about half full – stop and empty it.
10. To remove the slicer or grater from the disc, ease the latch away from the side of the disc and lift the slicer/grater off.

Care and Maintenance

- Unplug the blender from the mains before cleaning and storing away.
- Clean soon after use, to prevent residues settling inside the jug.
- Remove the jug from the motor unit. Wash the jug, sieve, lid and cap in warm soapy water, rinse well, then turn the jug upside downto drain and dry.
- Keep hands out of the jug – BLADES ARE VERY SHARP.
- If it is left for too long without cleaning and bits have glued themselves to the inside of the jug, use a nylon brush to remove. If this does not work – crush a few ice cubes in it.
- It is not recommended to put the jug, lid or cap into the dishwasher as this can affect the surface finishes. Do not use harsh or abrasive cleaning agents or solvents.
- Wipe the outside of the motor unit with a clean damp cloth.
- Do not put the motor unit in water or any other liquid.

Servicing the Appliance

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

<u>If the appliance still does not work after checking the above</u>:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands

(Pty) Limited service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

Changing the Plug

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth
Blue = Neutral
Brown = Live

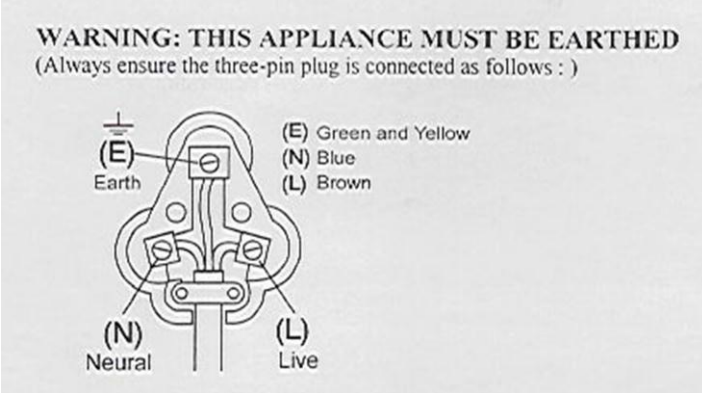

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

W A R R A N T Y

1. Home of Living Brands (Pty) Limited warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").

2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.

3. The faulty product must be taken to the supplier's service centre to exercise the warranty.

4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.

5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.

6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.

7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD

JOHANNESBURG TEL NO. (011) 490-9600
CAPE TOWN TEL NO. (021) 552-5161
DURBAN TEL NO. (031) 792-6000

www.homeoflivingbrands.co.za
www.russellhobbs.co.za
www.facebook.com/RussellHobbsSA